




Sony Vaio VGN-S260 Optical Drive Replacement

Written By: Jeffrey Bryan

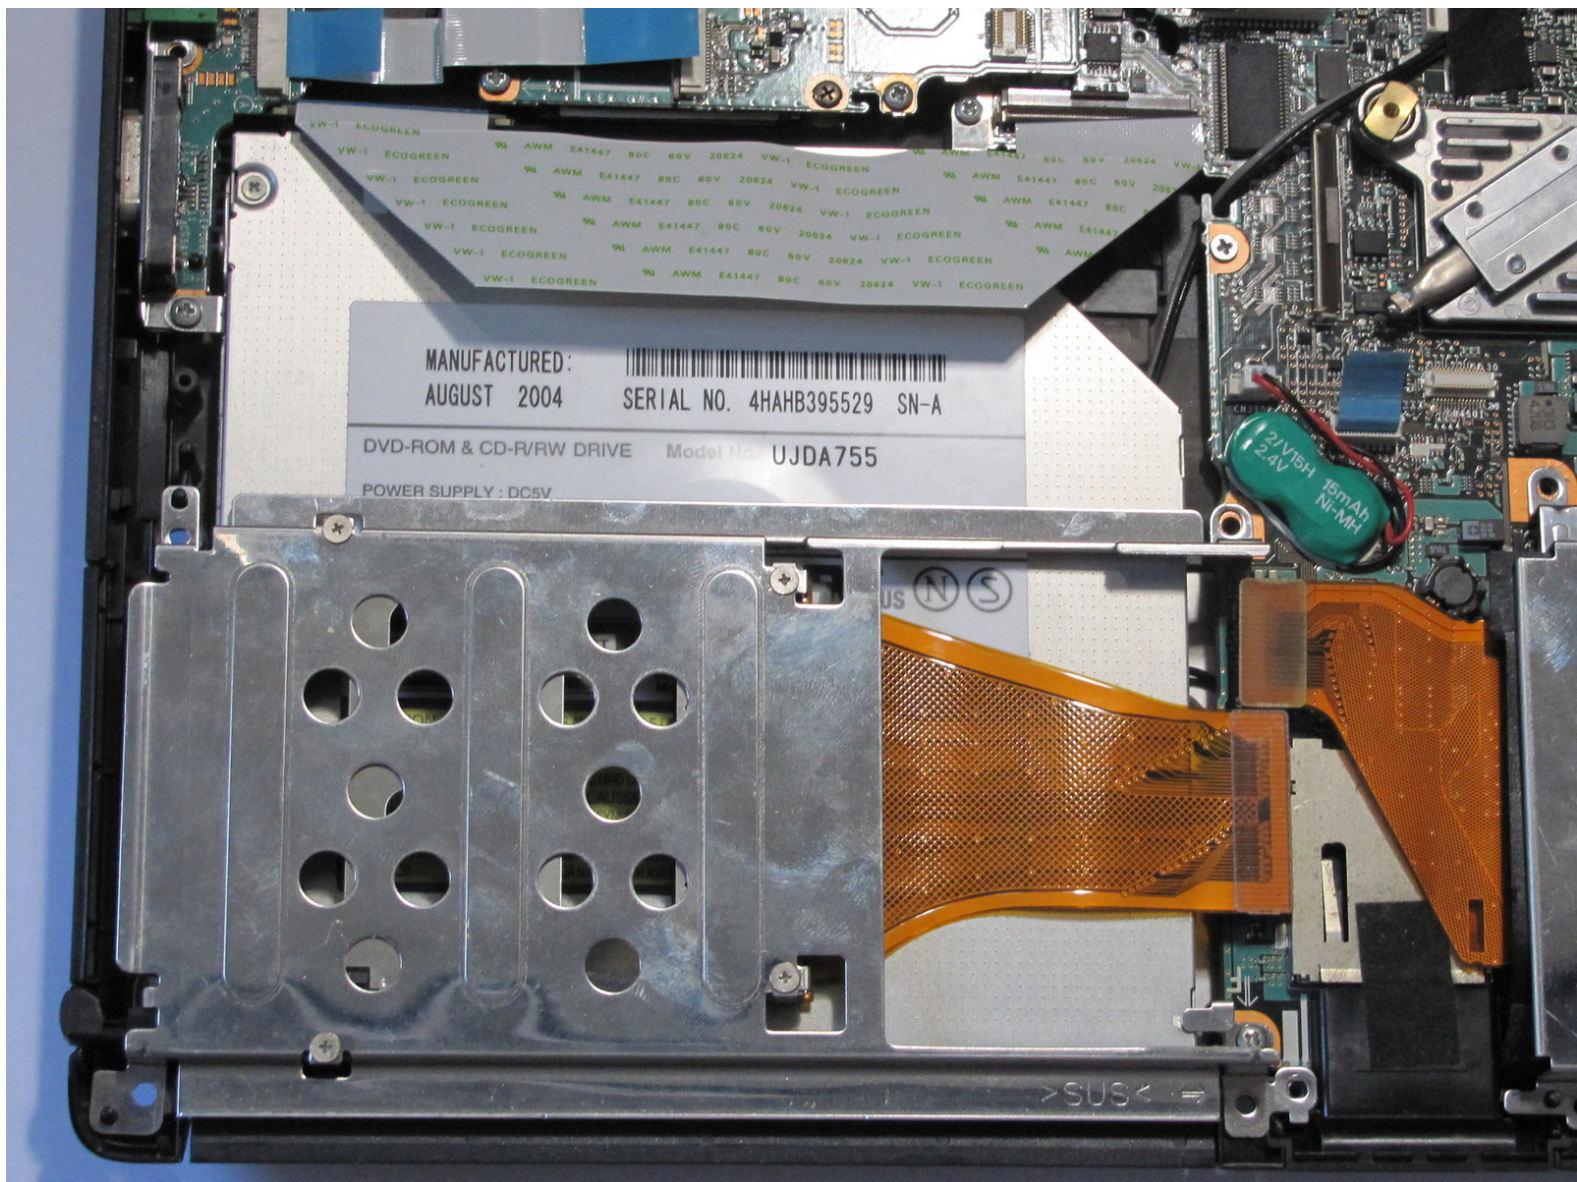

INTRODUCTION

How to take out the Optical Drive from the Sony Vaio VGN-S260 laptop



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Flip the laptop over so the Vaio logo is facing down
- Locate the battery at the top and Find the release and unlock slides on the battery
- Slide the unlock tab to the unlock position
- Slide the release tab in the direction of the arrow, i.e. towards the unlock tab

Step 2



- With the tabs still in the unlock position, slide the battery away from the main case.

Step 3 — Keyboard




- Flip the computer over so the Vaio logo is facedown
- Unscrew the 2 screws next to the battery

Step 4





- Flip the computer over again so the Vaio logo is face up
- Open the lid

Step 5

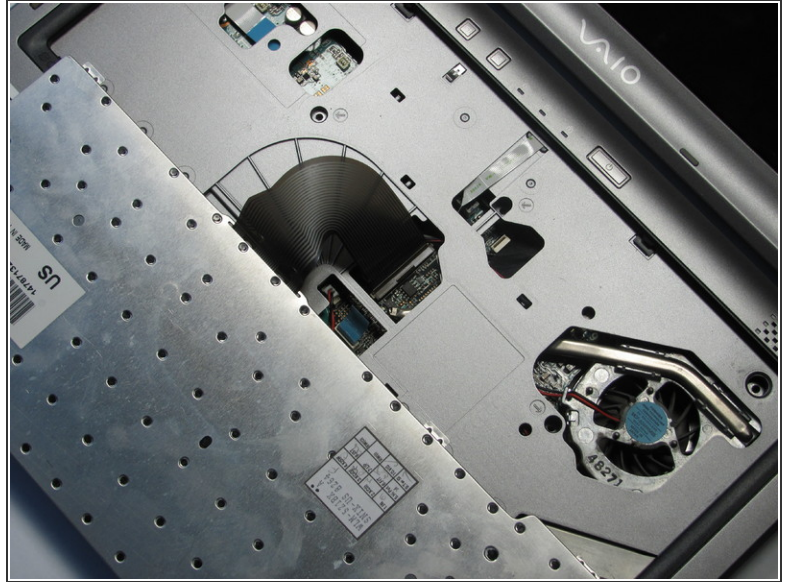

- Press down on the outer gray shell around the keyboard
 - Use the spudger to gently lift keyboard
- ⚠ Do not pull up the keyboard too far as it is attached to a ribbon underneath

Step 6

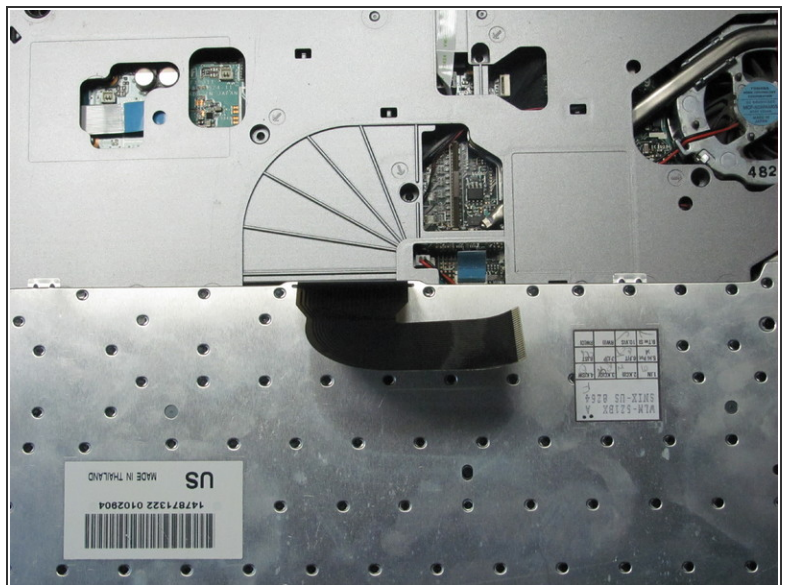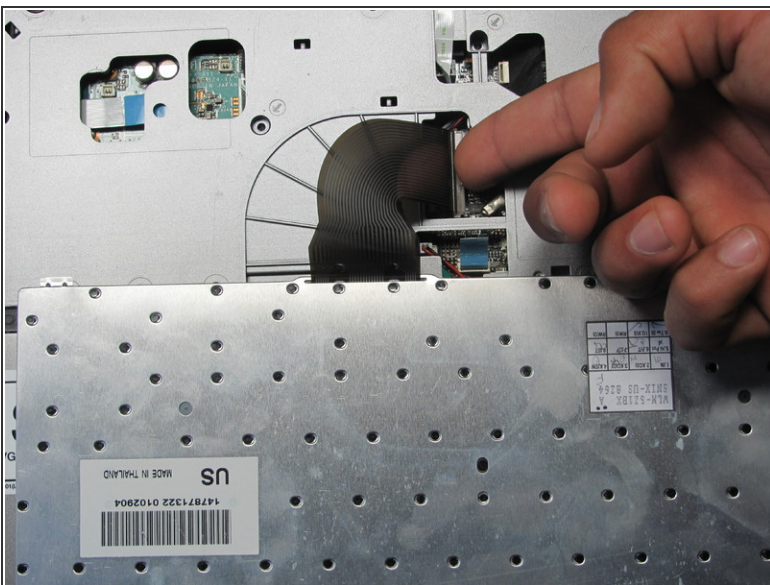

- Lift up lever underneath the ribbon to detach the keyboard.

Step 7 — Upper Casing




- Remove memory/wireless compartment cover

Step 8




- Flip so the Vaio Logo is face down
- Locate and remove a total of 8 screws on the bottom.

Step 9

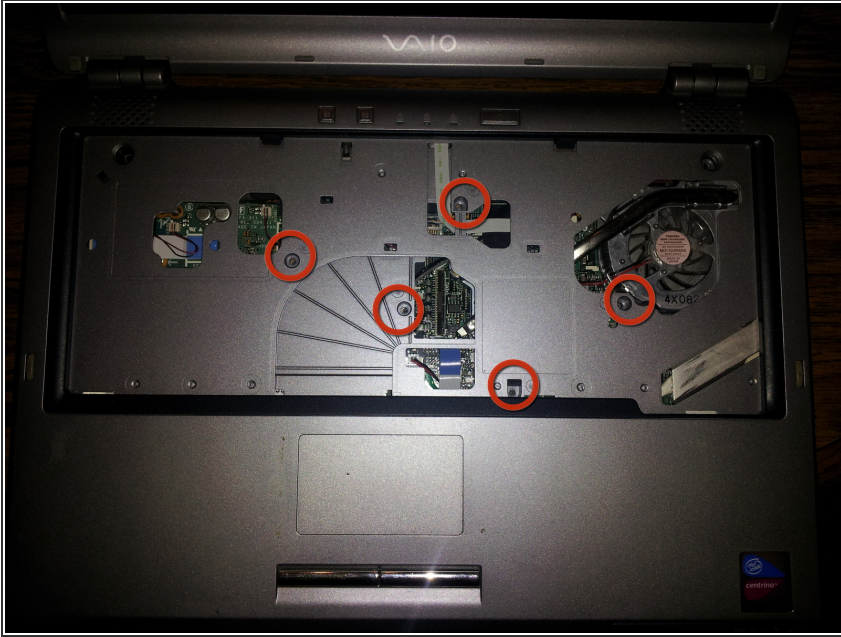

- Find and remove 5 screws (they all have arrows next to them) from cover

Step 10

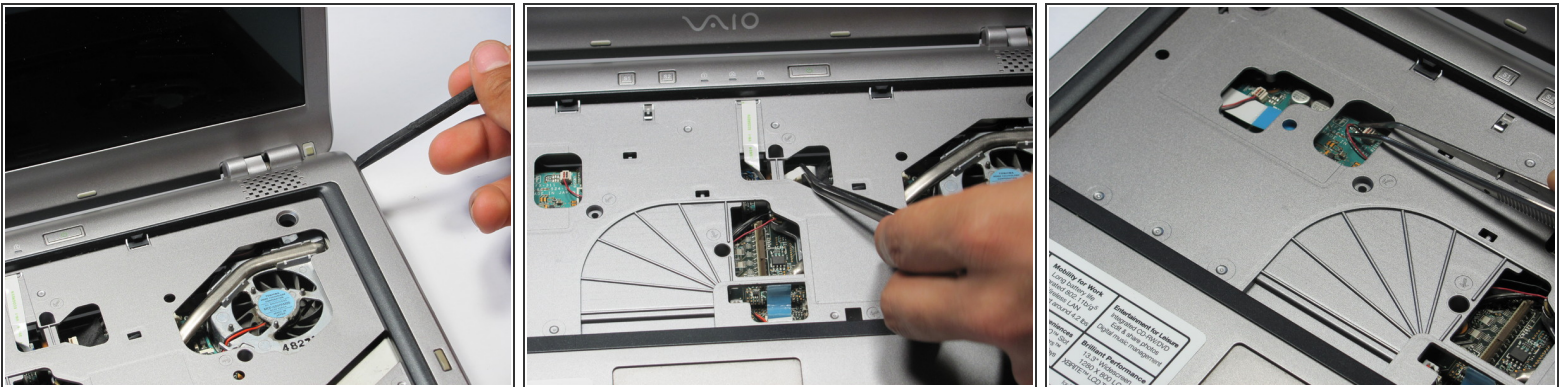


- Flip the laptop over so the Vaio logo is face up
- Use the spudger to pop up the upper casing
- ⚠ Do not lift too much as the Uppercasing is attached to wires underneath
- Remove the wires that are attaching the uppercasing to the motherboard

Step 11




- Remove the uppercasing

Step 12 — Optical Drive

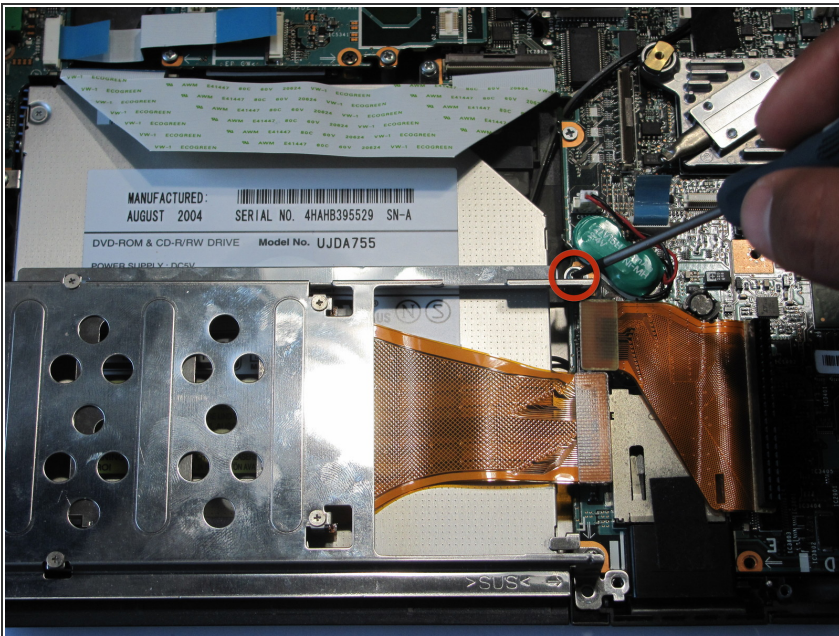


- Locate the screw holding the optical drive casing to the logic board
- Remove this screw

Step 13

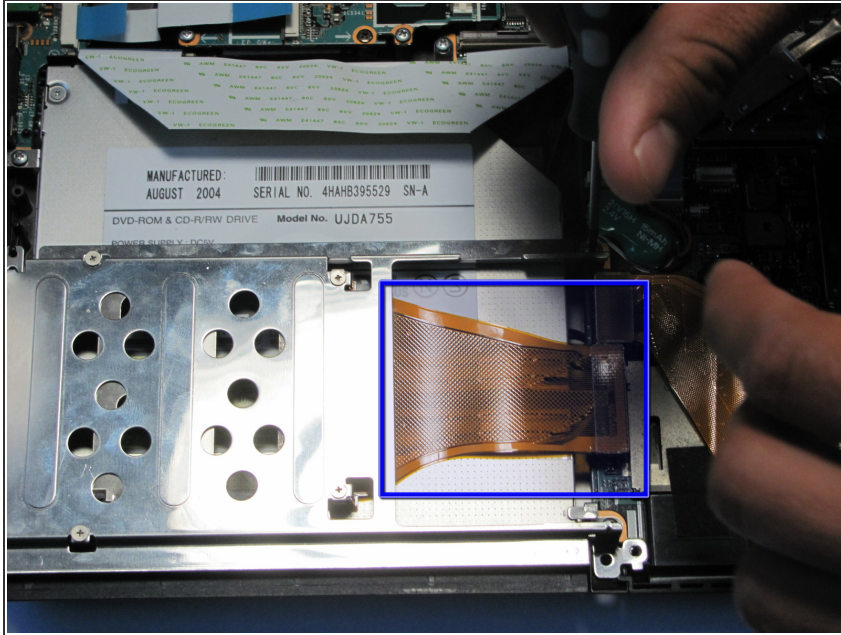

- Locate ribbon connecting optical drive case to logic board.
- Pop off the ribbon
- Remove the metal PC-Card cage

Step 14

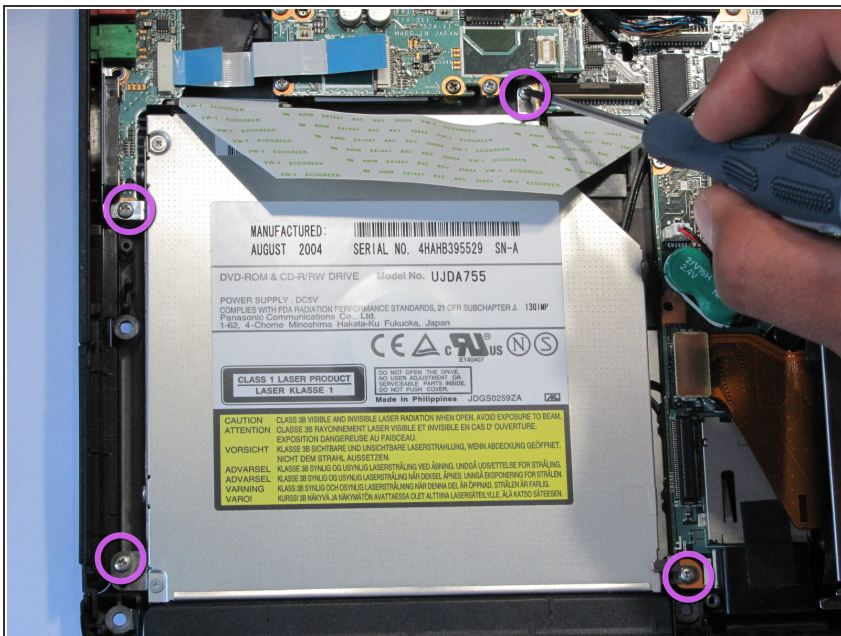

- Locate the four screws holding the optical drive to the logic board
- Remove the screws

Step 15



- Locate brown locking tab above optical drive.
- Lift up on brown locking tab until ribbon is loose
- Gently slide out and remove the optical drive from the computer

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 08:08:32 PM.